
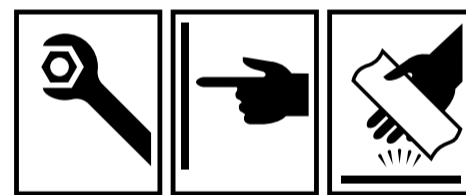
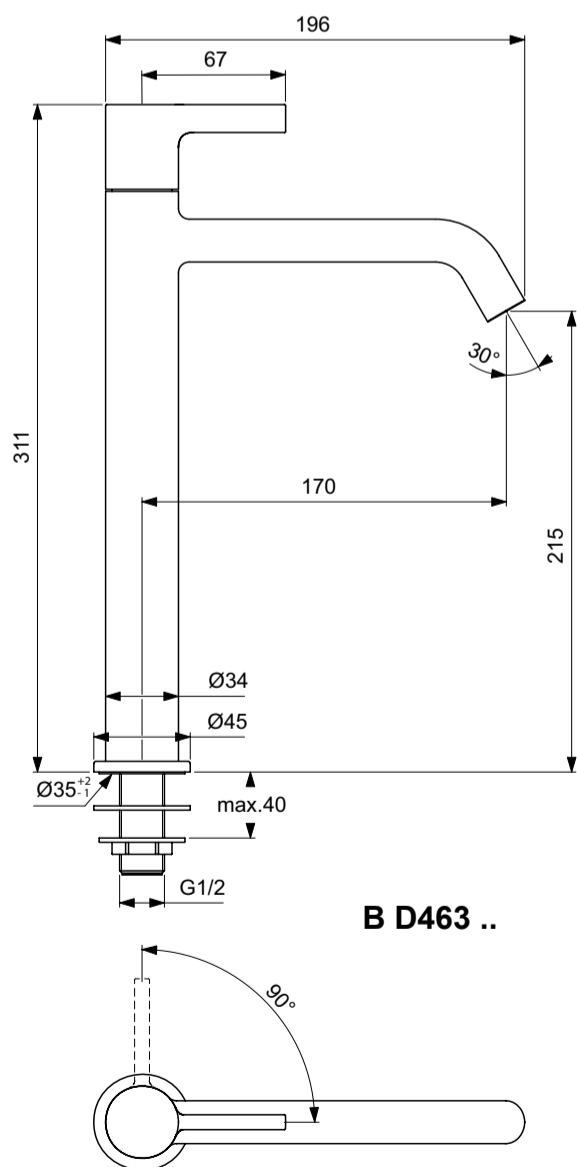


Ordering spares / Ersatzteil - Regelung / Pièces de rechange / Parti di ricambio / Lista de recambios / Onderdelen bestellen (NL/B) / Κωδικοί Ανταλλακτικών / Bestilling af reservedele / Beställning av reservdelar / Bestilling av reservedeler / Резервни части / Запчасти / Części zapasowe / Piese de schimb / Rendelhető alkatrészek / Запасні частини / Резервни делови / Резервни делови / Atsarginių dalių / Teltitavad varuosad / Rezerves daļas / Náhradní díly / Náhradné diely / Yedek parça siparişi / Nadomestni deli

XX = AA, AD,


- 1 - B 961886 XX
- 2 - B 961659 NU
- 3 - A 962708 NU
- 4 - A 960196 NU
- 5 - B 961276 XX
- 6 - B 960480 NU

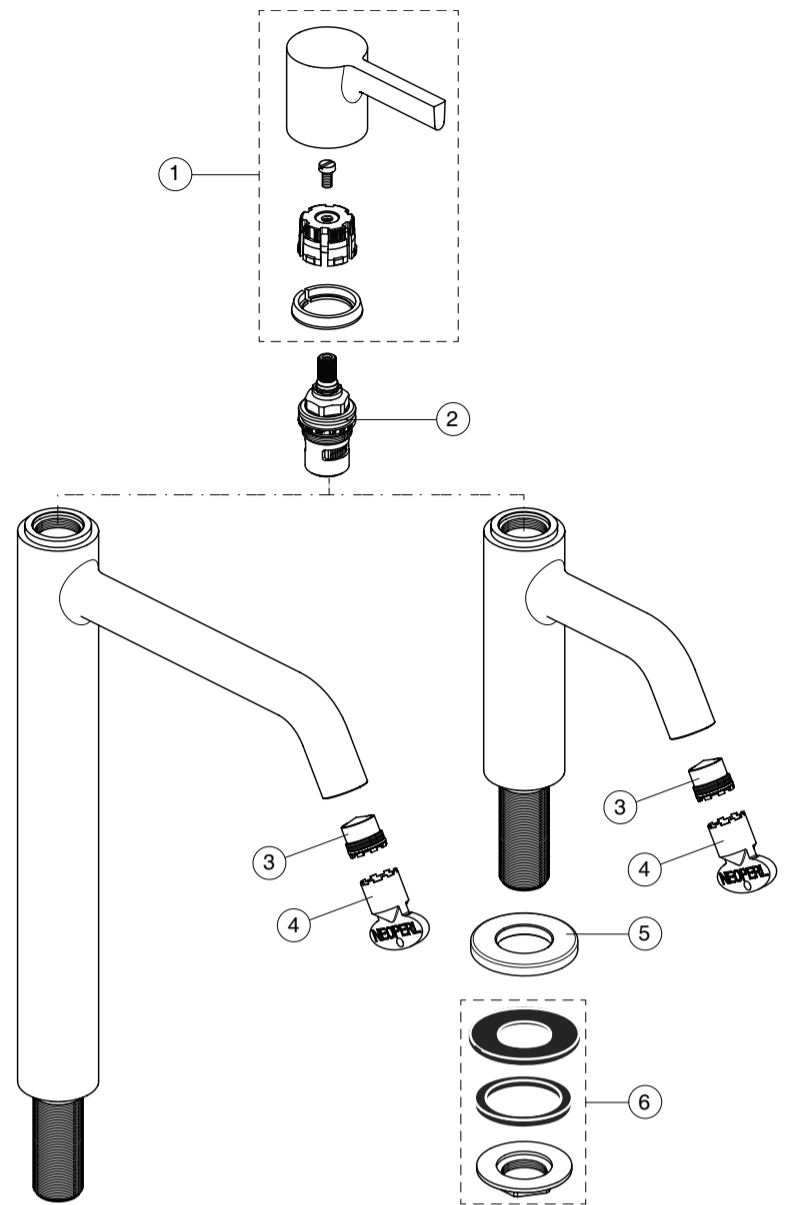


Ideal Standard




Joy

12.2022 / B565310

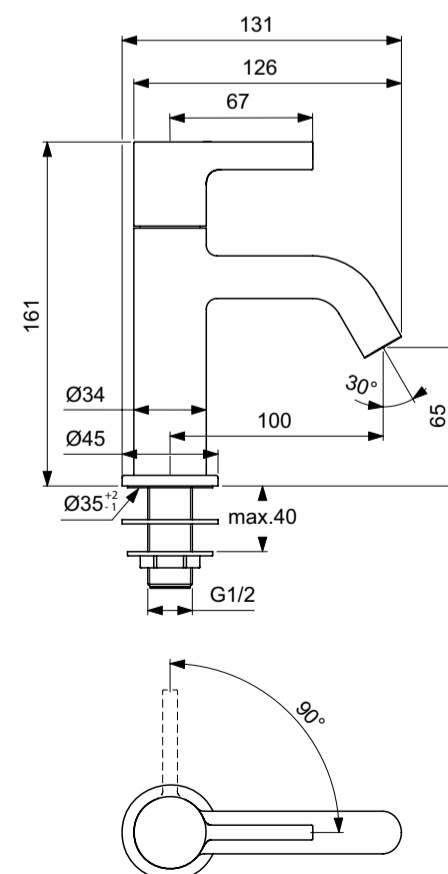

Ideal Standard International NV
Corporate Village – Gent Building
Da Vincilaan 2
1935 Zaventem
Belgium
<http://www.idealstandardinternational.com>

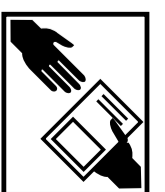

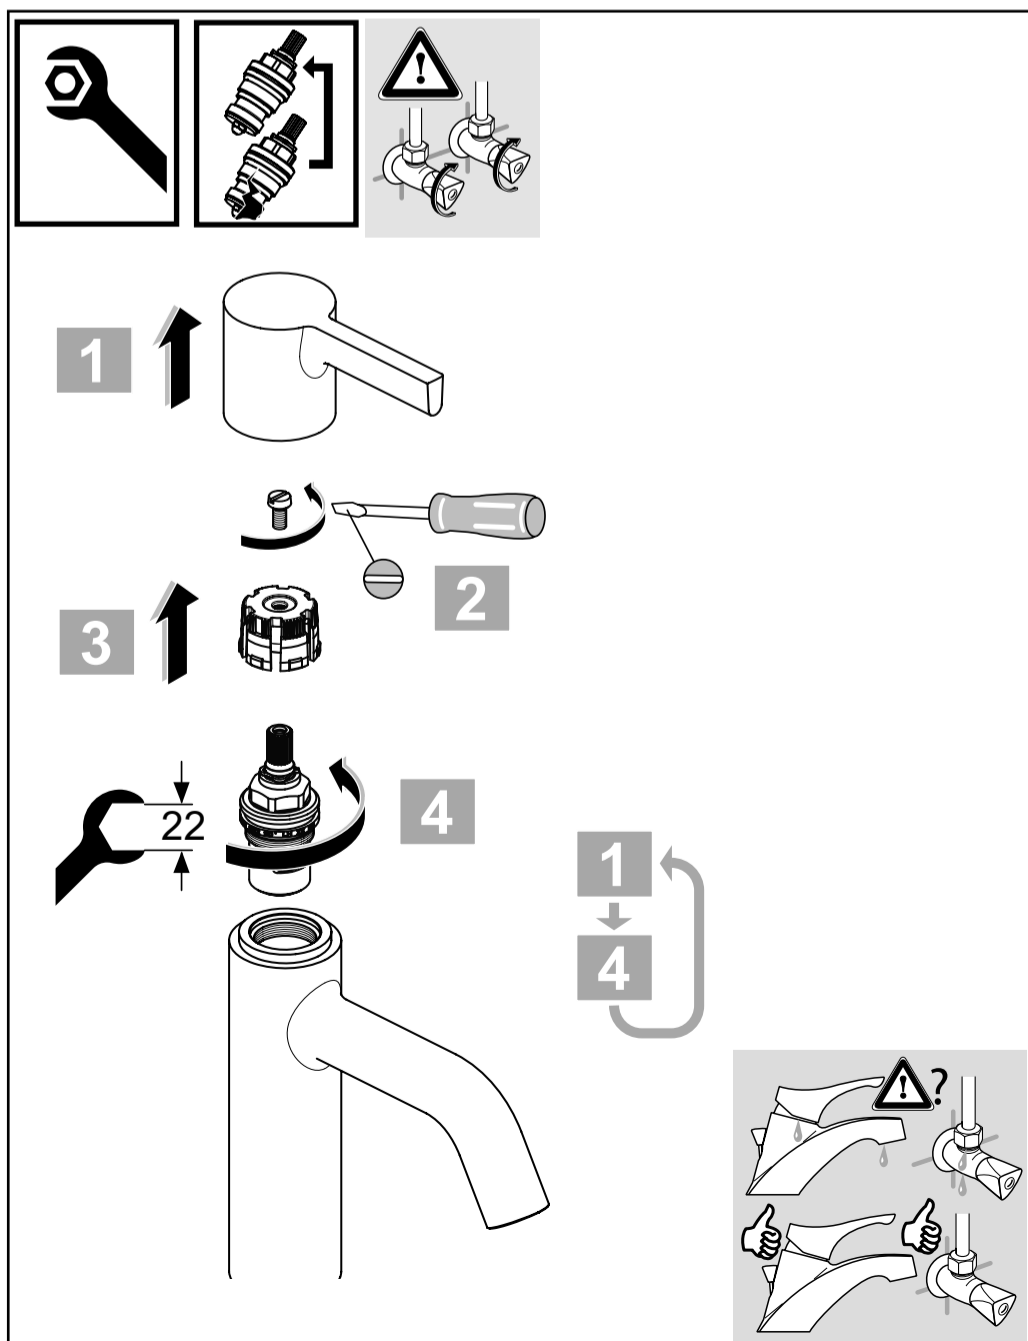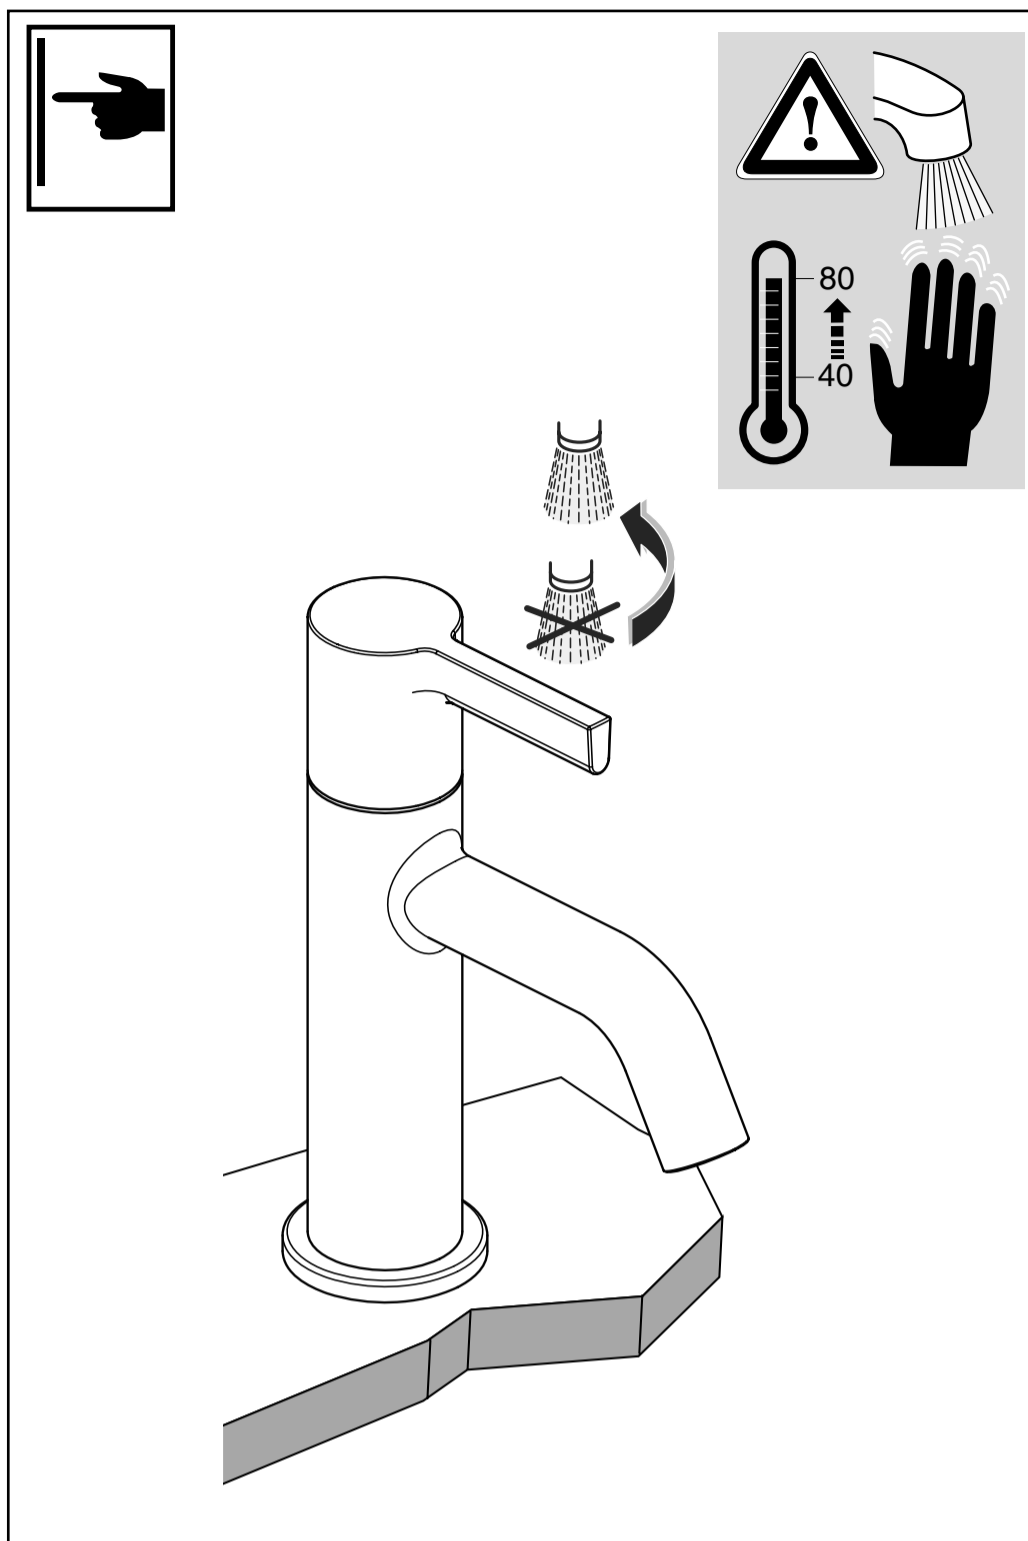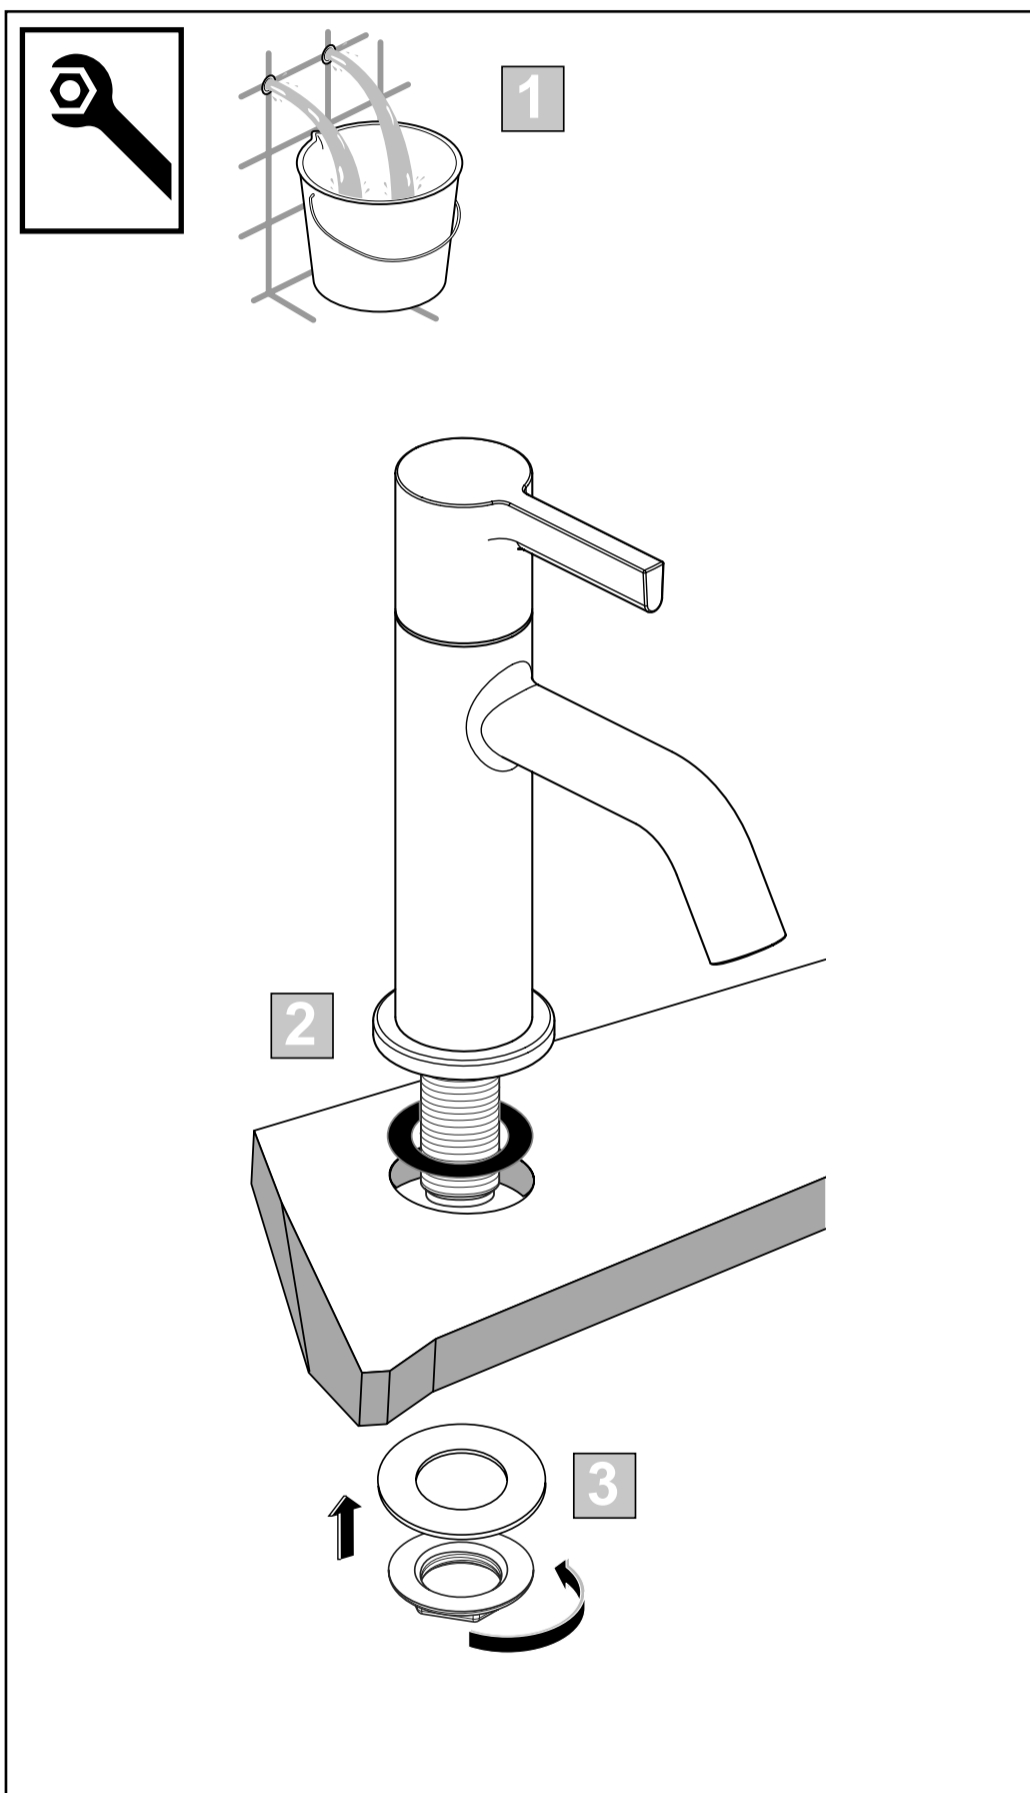

	P	bar	MIN. 0,1	MAX. 10	5		
	T	C	MIN. 0,1	MAX. 80	65	40	